PT3-SR3CR SERVICE-RIGHT™ Barrier Assembly Instructions

Package contents:

(6) **Foot Assemblies** (**A** in illustration)
(3) **Bottom Tube** (**B** in illustration)
(6) **Lower Frame Side Tube Assemblies** with straight connectors on one end (**C** in illustration)
(6) **Upper Frame Side Tubes** (**D** in illustration)
(3) FLEX-GUARD® **Fabric Barrier Panel** attached to **Top Bar Assembly** (**E** in illustration)
(30) Knurled Screws, yellow, threaded into feet for storage
(3) Laminated DANGER Signs
(1) Carry bag

The PT3-SR3CR SERVICE-RIGHT™ Barrier is comprised of three independent barriers, zippered together. Assemble each barrier, completely, one at a time. Build from the bottom, working your way up. Assembly is easier when two people work together on a flat surface.

A. Open the package and lay out parts to ensure receipt of all pieces.

B. Remove eight (8) knurled screws from the feet for each barrier frame assembly. Knurled screws secure the frame components.

Throughout the assembly, align holes for knurled screws in the tube sections with holes for knurled screws in the connectors. Secure the frame parts with knurled screws on the side of the frame opposite the fabric barrier panel.

Step 1. Attach each **Foot Assembly (A)** to the **Bottom Tube (B)** by inserting a corner bracket into the tube. Align holes and secure with knurled screws.

Step 2. Attach the **Lower Frame Side Tube Assemblies (C)** to the **Foot Assemblies (A)**, align holes, and secure with knurled screws.

Step 3. Add **Upper (D) Frame Side Tubes** to the **Lower Frame Side Tube Assemblies (C)**, align holes, and secure with knurled screws.

Step 4. Connect the **Top Bar Assembly (E)** to the **Upper Frame Tubes (D)**, align holes, and **s**ecure with knurled screws to complete the frame assembly.


Step 5. Place the assembled frame in the upright position with feet on the floor. Unroll the **Fabric Barrier Panel** and secure the fabric panel to the frame sides and bottom with the VELCRO® straps which are sewn into the panel.

Step 7. Insert the laminated Danger Sign into the pocket of the Fabric Barrier Panel. This side of the barrier should be facing away from the laser.

Repeat Steps 1 through 7 to assemble the remaining frames and fabric panels.

Step 8. To complete the PT3-SR3CR SERVICE-RIGHT™ assembly, position the barriers next to each other and connect the barrier panels with zippers: Mate the zipper at the bottom of the panel ends and zip up with the pull tab. Repeat for other barrier pairs.

PT3-SR3CR Assembly Instructions

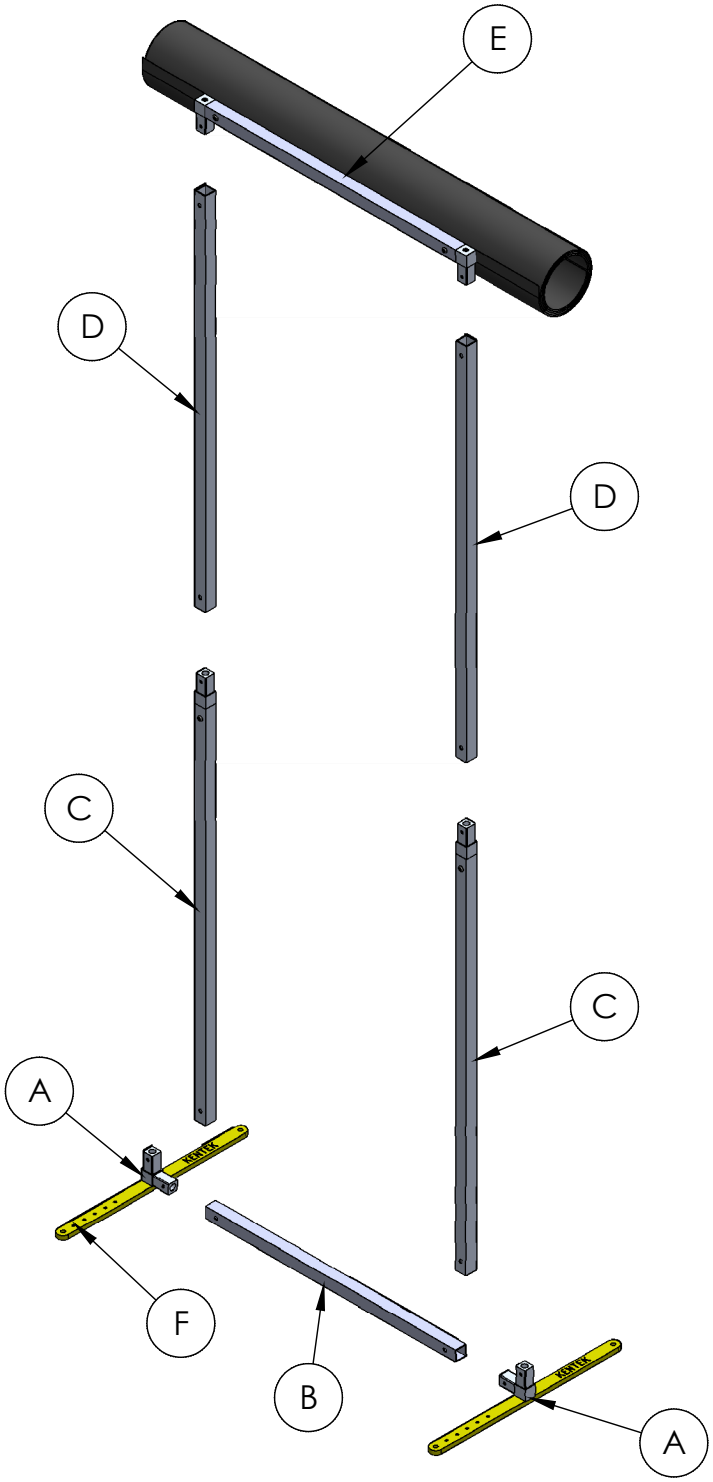

Item	Description	Quantity	Dimensions
A	Foot Assemblies	6	Feet are 18 inches long [457mm]
B	Bottom tube	3	24 inches [610mm]
C	Lower Frame Side Tube Assembly	6	34.6 inches [879mm] without connectors
D	Upper Frame Side Tube	6	34.6 inches [879mm]
E	Top bar Assembly with attached panel	3	24 inches [610mm] without connectors
F	Spare Knurled Screws	6	Yellow 1/4-20X.375
	Carry Bag	1	48x16x16 inches [1219 x 406 x 406mm]

KENTEK
"laser People Helping Laser People"®
5 Jarado Way, Boscawen NH 03303
P: 603-223-4900
E: info@kenteklaserstore.com
W: www.kenteklaserstore.com