


Protective Eyewear




7/16-Inch Box Wrench




Socket Wrench with 1/4- and 3/8-Inch Sockets

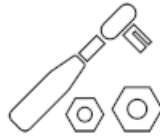

Metal Cutting Saw
Hacksaw

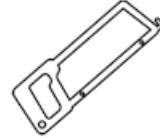

Alcohol Towelettes

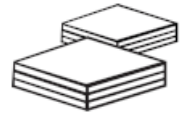

Drill




Measuring Tape



Pencil



Plastic Sheeting

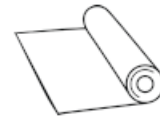

Masking Tape



PLEASE READ ALL INSTRUCTIONS BEFORE STARTING INSTALLATION

EVER-GUARD® CURTAIN INSTALLATION - CEILING MOUNT

1. Open the shipping container, unpack and inspect the contents, and verify the quantities of each part listed on the Bill of Materials. If there is damage or if parts are missing, please contact Kentek immediately. **Do not cut the straps around the EVER-GUARD® curtain panels at this time.**
2. Prepare the work area. Arrange the hardware to look like the Kentek Top View (-TV) drawing.
3. Precisely mark the track path and the support and connector locations on the ceiling with tape or a pencil. The Top View (-TV) drawing shows the estimated track path, locations of supports, and suggested lengths of track. Small adjustments may need to be made at the installation site.*
4. Track sections are shipped in lengths of four, five, six, eight, or ten feet. The track may need to be cut with a metal cutting saw. Before cutting the track, verify the exact length between the mounting support hardware. Ends of the track pieces should meet inside the mounting connectors.
5. Installation requirements and connectors will vary depending on the track layout. Start by loosening connector nuts on hardware with the 7/16-inch wrench. Install 4-way connectors first, then 3-way, then 2-way, then straight connectors.
6. Install track pieces between 4-way connectors first, then 3-way, 2-way and straight. Leave a section of track open to insert the rollers.
7. Verify that all ceiling- and wall-mounted hardware is installed properly and secure.** Tighten all nuts except for the section of track that is open for inserting rollers. Align, level, and secure the track.
8. Prepare a large, clean work area. Unroll the plastic sheeting on the floor or a work surface. Place the curtain panels on the plastic to keep them clean. **Do not cut the straps on the curtain panel bundles until the panels are standing and ready to install.**
9. Arrange the curtain panel bundles by the serial number on the Top View (-TV) drawing.
10. EVER-GUARD® panels should be mounted with the convex side of the material facing the inside of the laser area.
11. After arranging the bundles by serial number, stand the first bundle up so the grommets are at the top. While one person holds the bundle, the other person should cut the straps.
12. Install the panels, one section at a time. Insert a C-link into the grommet on the first panel and tighten. Slide the panel up to the track. Insert a roller into the track end. Hang the C-link on the roller hook.
13. Repeat the process to install all curtain panels in the track.
14. Finish the installation by inserting the open end of track into the connector. Tighten the nuts.
15. Verify that all connections are secure. Verify the stability of the curtain installation.



16. Roll the curtain out to verify smooth operation through connections.
17. Please read the Use, Maintenance, and Cleaning Instructions. Spot clean the curtain as needed. Your curtain is now ready for use.

ADDITIONAL ASSEMBLY (if valance is included)

1. Valances should be installed outside the laser area and offset 6 inches from the curtain track to prevent interference with folding of the EVER-GUARD® curtain panels. Installers may mount valances to wood, L-brackets, or angle trim. Failure to follow these instructions may result in improper operation of the curtain and void the warranty.
2. Clean the mounting surface with alcohol. Allow to dry.
3. Apply the adhesive side of 3M™ Dual Lock™ to the clean vertical mounting surface. Press firmly to remove bubbles. Allow time for the adhesive to adhere before attaching the valance.
4. Valances are made in two or more sections that are installed together. Locate valances with same serial numbers and ending in -1, -2, -3, etc. Install valances in numerical order.

*For suspended ceiling installation: Additional hardware (not included) is required and may include appropriate length, 3/8-inch diameter threaded rod, grid/beam connectors, lock washers and nuts. Grid/beam connectors will fasten directly to the I-beam and to the track connector supports provided by Kentek.

****It is the responsibility of the installer to ensure that the curtain system is safely suspended from proper support structures and in compliance with all building codes.**

ADDITIONAL INSTALLATION INFORMATION

[Videos with Installation Suggestions](https://youtu.be/pqSw7gnJcYk) <https://youtu.be/pqSw7gnJcYk>

[Curtain Hardware Details](https://www.kenteklaserstore.com/products/laser-containment/laser-safety-curtains/curtain-hardware) <https://www.kenteklaserstore.com/products/laser-containment/laser-safety-curtains/curtain-hardware>